


High Security Lock and Key Set (5120WL5100) Instructions

If you have any questions about how to assemble or use this replacement lock, please call us directly at 800-824-9985 or visit us at www.MailboxWorks.com

This High Security Lock is suitable for use on any Oasis Locking Mailboxes. After you've attached the lock as described below, you can fine tune the cam by bending it slightly inward or outward until the engagement is to your liking.

1 Remove the existing lock. If you have access to the rear of the lock, simply remove the cam with a screwdriver and the large nut with a wrench or pliers. Slide the lock off the door. If you don't have access to the rear of the lock (e.g., lost keys), drill out the center of the lock with a 1/8" diameter drill bit until the internal mechanism is broken. After the internal mechanism is drilled out, insert a screwdriver into the key way and force the lock open. Remove the lock as described above.

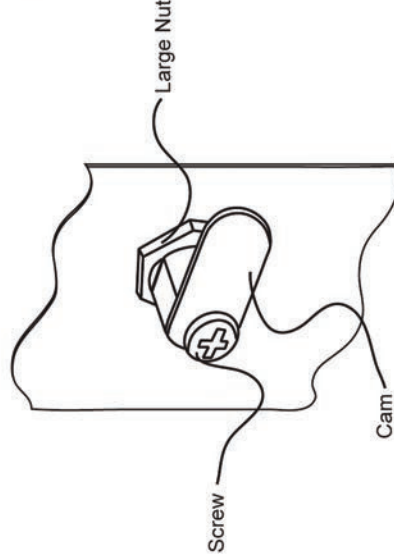

2 Insert the new lock into the door hole and secure using the large nut. You may need to unlock the lock to fit it into the hole with the cam on. Test the lock to see if the cam properly engages the mailbox body. If it doesn't engage as desired, try a different cam or fine tune the cam by bending it inward or outward as necessary.

The **Mailbox Works**
Since 1989

800-824-9985
www.MailboxWorks.com