


CC71FL/CC72FL/CCF3FL INSTALLATION CUT SHEET

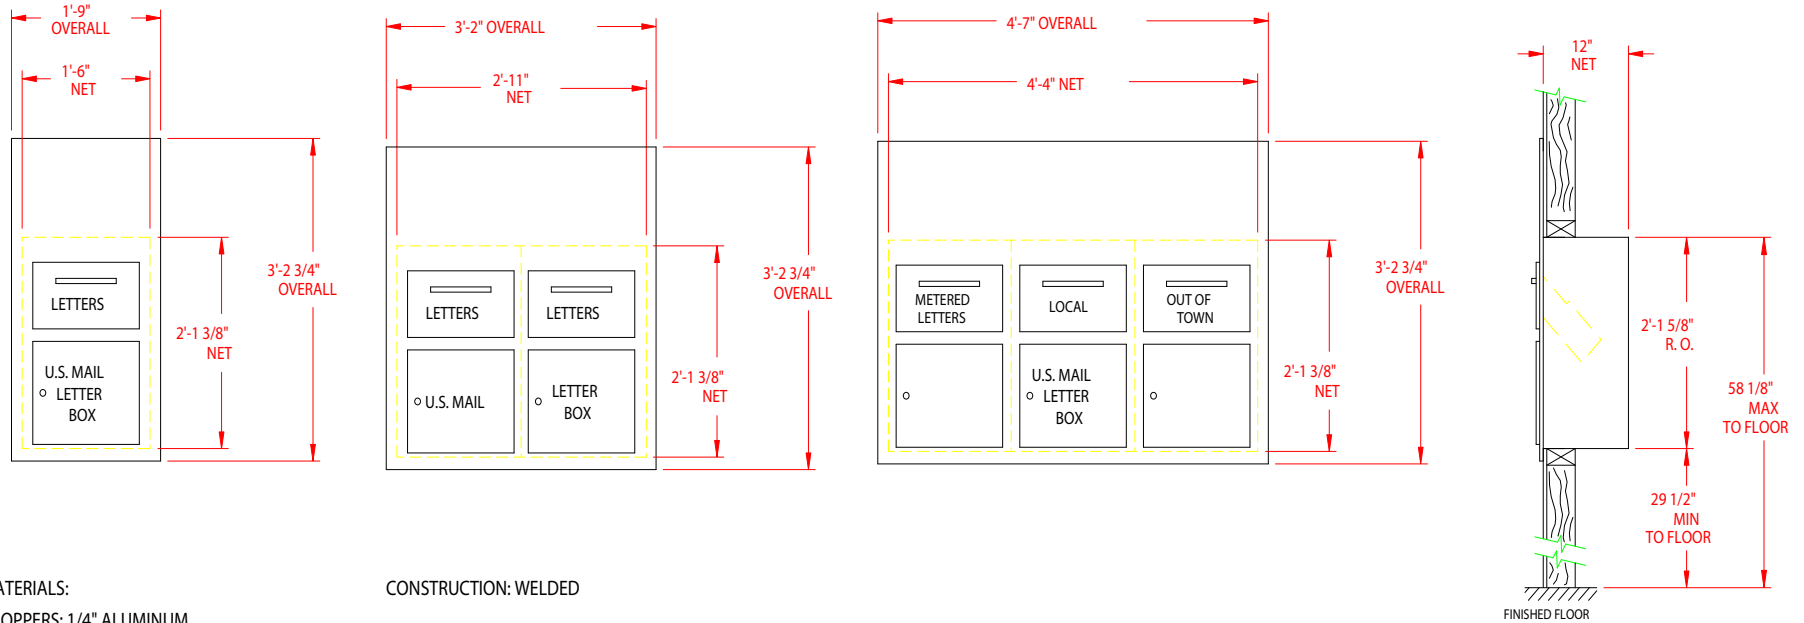

MATERIALS:

- HOPPERS: 1/4" ALUMINUM
- FRONT PLATE: 1/4" ALUMINUM

FINISHES:

- CLEAR ANODIZE
- GOLD ANODIZE
- BROWN POWDER COAT

CONSTRUCTION: WELDED


HOPPER OPENING:
-12 1/2" WIDE x 6" HI

ENGRAVING:
-1 1/8" HI (AS SHOWN)
-OPTIONAL, AS SPECIFIED

TRIM: OPTIONAL, MATCHING FINISH.

INSTALLATION NOTES:

1. FABRICATE WALL OPENING AT DESIRED LOCATION TO ROUGH OPENING DIMENSIONS AS SHOWN.
2. DRILL HOLES IN TOP AND BOTTOM OF COLLECTION UNIT SIDE PANELS; AND LEFT, CENTER AND RIGHT (AS NECESSARY) OF COLLECTION UNIT TOP AND BOTTOM PANELS. LOCATE HOLES AT ONE-HALF THE WALL THICKNESS FROM THE BACK OF THE COLLECTION UNIT FRONT PLAE.
3. INSERT COLLECTION UNIT INTO OPENING AND DRILL MOUNTING HOLES INTO OPENING AT SIDE, TOP AND BOTTOM PANEL HOLE LOCATIONS.
4. IF NECESSARY, INSERT ANCHORS INTO MOUNTING HOLES.
5. MOUNT COLLECTION UNIT USING #8 SCREWS.

CUSTOMER			
JOB			
 AUTH - FLORENCE MANUFACTURING COMPANY 591 MITCHELL ROAD GLENDALE HEIGHTS, IL 60139	DATE	5-14-01	P.O. NO.
	SCALE	1/16:1	ORDER NO.
	DRAWING NUMBER	CS2006	DRAWN BY
		DJ	