


1400/1450/1600 CABINET INSTALLATION INSTRUCTIONS (FRONT LOAD)


SHIM (NOT INCLUDED)

MOUNTING SCREWS (NOT SUPPLIED*)

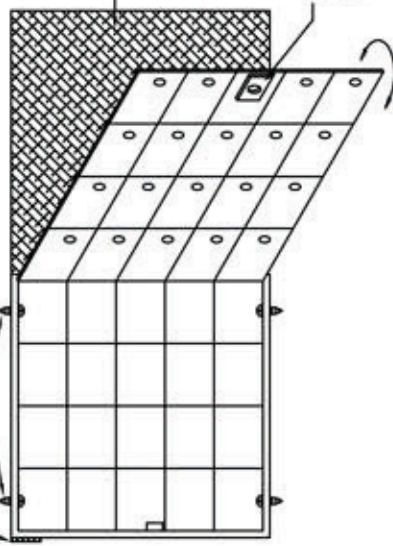

REFER TO ARCHITECTS CONSTRUCTION DRAWING

INSTALL NEXT GROUP

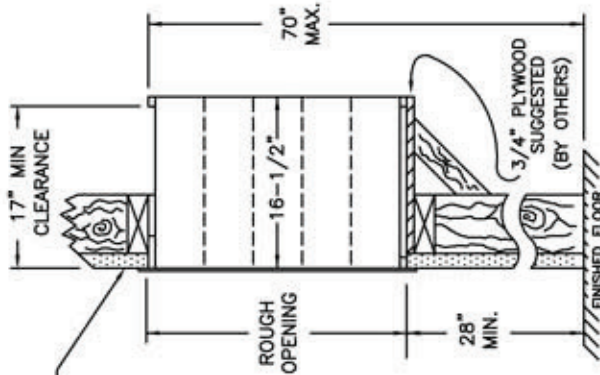

NOTE: WHEN SNAP ON TRIM IS USED, CABINET MUST PROJECT 3/8" BEYOND FINISHED WALL TO MAKE A FLUSH SURFACE BETWEEN THE CABINET AND THE TRIM, SEE OPTIONAL TRIM DETAIL.


1. SLIDE FIRST GROUP OF BOXES INTO THE ROUGH OPENING IN WALL.
2. SHIM AS NECESSARY FOR GATE TO OPEN AND CLOSE FREELY. INSTALL AND TIGHTEN MOUNTING SCREWS* (2 IN TOP AND 2 IN BOTTOM).
3. INSTALL NEXT GROUP OF BOXES THE SAME AS ABOVE.

NEXT STEPS ONLY FOR CABINETS WITH OPTIONAL SNAP ON TRIM


4. SCREW MOUNTING CLIP TO WALL USING #8 X 1-1/4" SCREWS, SEE OPTIONAL TRIM DETAIL.
5. HOOK ONE EDGE OF TRIM OVER LEG OF CLIP AND SNAP OVER SECOND LEG OF CLIP.

MITER TRIM MATERIAL AS REQUIRED

INSTALL MOUNTING CLIPS AS SHOWN IN DETAIL

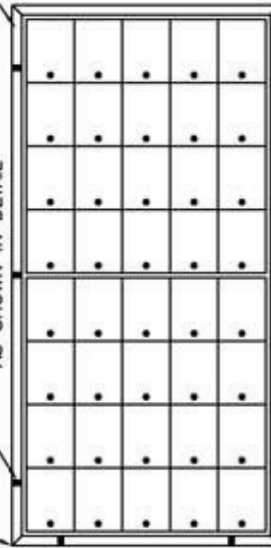

OPTIONAL SNAP ON TRIM MOUNTING DETAILS

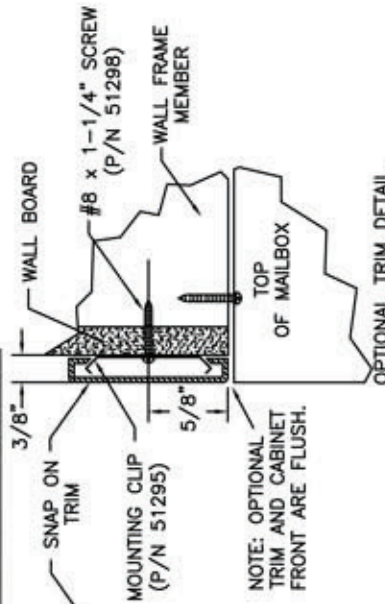

NOTE: OPTIONAL TRIM AND CABINET FRONT ARE FLUSH.

PRODUCT SERIES:

RECOMMENDED MOUNTING DETAILS
FOR 1400/1450/1600 SERIES F/L MAILBOXES

USPS STD-4C COMPLIANT MAILBOX SYSTEMS ARE MANDATORY FOR ALL **NEW CONSTRUCTION AND MAJOR RENOVATIONS**. MAILBOXES THAT ARE 4B+ COMPLIANT WILL ONLY BE CONSIDERED USPS APPROVED IF THEY ARE REPLACING EXISTING MAILBOXES. CHECK WITH LOCAL POSTAL OFFICIAL PRIOR TO INSTALLING MAILBOX.

1400 SERIES ARE 4B+ COMPLIANT
1450/1600 SERIES ARE NOT 4B+ COMPLIANT

The Mailbox Works
SINCE 1989

www.MailboxWorks.com
800.824.9985

info@mailboxworks.com

MODEL AF HORIZ. REV A

SCALE 1:16 LAST REV. DATE 7/2/2009

DRAWING NUMBER CS2057 DRAWN BY NBC