


TOOLS NEEDED

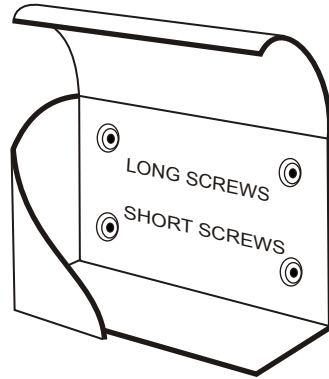

INSTALLATION INSTRUCTIONS

Place mailbox in the desired location and mark screw holes.

Using a power drill, make pilot holes or holes for installing plastic anchors depending on surface material of wall.

Using a short screw driver, install short screws on lower holes and longer screws on top holes. Test clearance of lid by opening lid slowly making sure it does not scratch against the wall.

The lid is designed to open to a specific angle to prevent it from damage and scratching. DO NOT force the lid to open beyond this point.

MAINTENANCE

The mailbox is lacquer coated, DO NOT use metal polish or abrasive material to clean the surface. Clean using soft cloth and mild detergent. It is highly recommended to apply a coat of car wax once or twice a year to protect the surface from fading or pitting due to exposure to sun light or in coastal areas; salt residue accumulation from the air.