
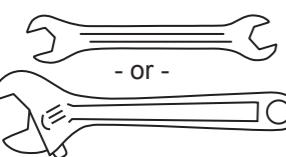
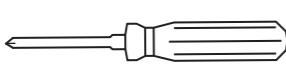
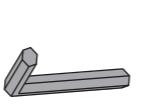
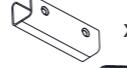
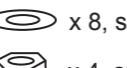


# MB1 Mailbox with 2" Round In-Ground Mailbox Post (Model 7680) Assembly Instructions

## Assembly Instructions

Tools (not included)	Tools (included)	Hardware (included)
Two open end wrenches  - or - 	Phillips head screwdriver 	<b>1</b> To join the two post pieces:  x 1, metal expansion joiner  x 2, headless set screws  <b>3</b> To attach the mailbox to the plate:  x 4, small hex bolts  x 8, small washers  x 4, small hex nuts  x 2, hole plugs

**DO NOT** install into ground until both post pieces are securely connected using the expansion joiner.  
CONTACT THE LOCAL POST OFFICE BEFORE INSTALLING THE MAILBOX TO ENSURE ITS CORRECT PLACEMENT AND HEIGHT AT THE STREET. GENERALLY, MAILBOXES ARE INSTALLED AT A HEIGHT OF 41-45 INCHES FROM THE ROAD SURFACE TO INSIDE FLOOR OF THE MAILBOX OR POINT OF MAIL ENTRY (LOCKED DESIGNS) AND ARE SET BACK 6-8 INCHES FROM THE FRONT FACE OF CURB OR ROAD EDGE TO THE MAILBOX DOOR.

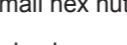